


Boutique Sash Installation

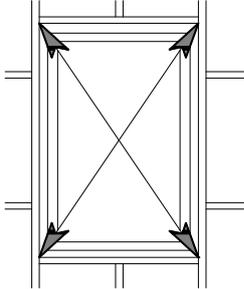

Step 1

BEFORE INSTALLING SASH

Measure the diagonals of the boutique window with a measuring tape. It is important for the correct operation of this product, that the tolerance does not exceed 4mm.



Step 2

UN-SNAP BEAD

Un-snap the aluminium bead under the Head/Transom of the window frame (indicated by arrow). Gently insert a Flat screwdriver above the bead and lever it away from the Head/Transom.



Step 3

REMOVE BEAD

Once the bead is un-snapped, remove the bead from the window frame.



Step 4

ORIENTATE SASH


The Sash must be installed from the outside face of the window. Make sure that the sash hooks (highlighted in picture) are located at the top of the sash and pointing outside.



Step 5

POSITION SASH IN OPENING

Angle the sash at 45° and lift the sash into position.

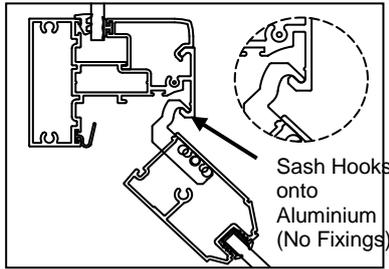

Step 6

HOOK IN SASH

Hook the sash into the Head/Transom (indicated in diagram). Make sure that the sash is properly hooked in, before gently lowering the sash and closing the opening.



Step 7

ATTACH WINDER TO SASH

Hook the winder over the two screws on the sash.



Step 8

FIX WINDER TO SASH

Secure the winder to the sash with Phillips Head screwdriver. It may be easier to fix the screws if the winder is first removed from the window frame (to improve access to screws).



Step 9

SNAP IN BEAD

Wind the sash closed and ensure that it seals correctly. Position the bead back into the Head/Transom of the window frame and snap into position.

PLEASE NOTE: The Sash must be fitted prior to nailing window in place on any **Second Story**.